

## CHEMICAL BARCODING - HARDWARE GUIDE

### Contents

PART 1: LI4278 SCANNER AND ZD410 PRINTER QUICK SETUP GUIDE .....	2
LINEAR IMAGER – QUICK START GUIDE .....	2
STEP 1. CRADLE CABLE CONNECTIONS .....	2
STEP 2. PAIRING SCANNER TO CRADLE .....	2
STEP 3. CONNECT HOST INTERFACE .....	2
STEP 4. ENABLE REQUIRED FEATURES .....	3
STEP 5. BATCH SCANNING (OPTIONAL) .....	4
OPTIONAL FEATURES .....	5
SCANNER TROUBLESHOOTING AND ERGONOMICS.....	7
ZD410 (203dpi) BARCODE PRINTER - QUICKSTART GUIDE .....	9
STEP 1. INSTALLING THE PRINTER.....	9
STEP 2. CONFIGURING THE PRINTER .....	9
STEP 3. TESTING THE PRINTER .....	9
TROUBLESHOOTING & LABEL REPLACEMENT.....	10
PART 2: ACCESSING PRINTERS OVER THE NETWORK QUICK SETUP GUIDE .....	11
SHARING A BARCODE PRINTER OVER THE NETWORK .....	11
ACCESSING A BARCODE PRINTER FROM THE NETWORK.....	12
PRINTING OVER THE NETWORK.....	13

#### IMPORTANT INFORMATION

- Always use a dedicated PDF reader such as **Adobe Acrobat** to open barcodes for printing.
- Barcodes opened from your internet browser will be compressed and made unreadable to scanners.

#### Revision History:


V1.0 New Document (04/08/2021)

V1.1 Sharing and printing over Network added. Added improved document navigation (10/02/2022)

## PART 1: LI4278 SCANNER AND ZD410 PRINTER QUICK SETUP GUIDE

### LI4278 LINEAR IMAGER QUICK START GUIDE

See Product Reference Guide for detailed information

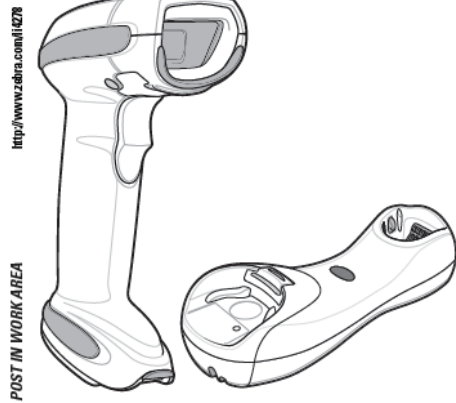

http://www.zebra.com/li4278


POST IN WORK AREA



- 1 Scan Window
- 2 Scan Trigger
- 3 LED
- 4 Beeper



#### Cradles

**NOTE:** The scanner must be paired to the cradle prior to scanning in standard or presentation mode.

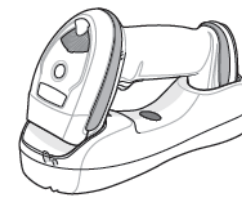

Refer to the LI4278 Product Reference Guide, or the cradle Quick Reference Guides for detailed information about cradle setup. When charging, use the cradle power supply for faster charge time.


### STEP 1 - CRADLE CABLE CONNECTIONS

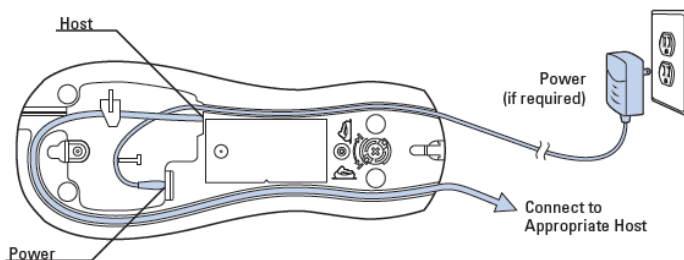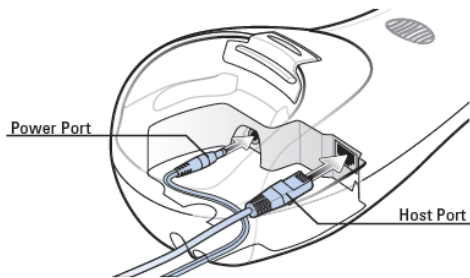

**Important:** Charge the linear imager scanner for 24 hours before the first full day of use.

### STEP 3 - CONNECT HOST INTERFACE

#### USB

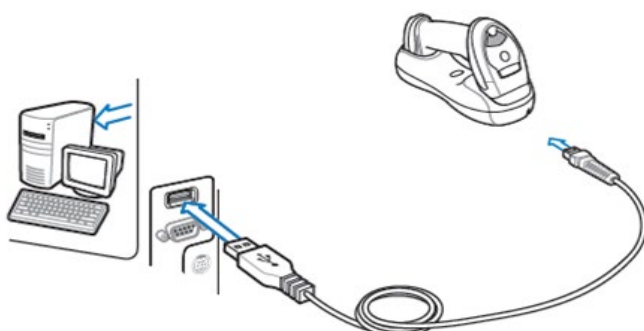


### STEP 2 - PAIRING SCANNER TO CRADLE

There are two methods available to pair (marry) the scanner to the cradle: scan the pairing bar code or pair on contacts by inserting the scanner into the cradle. Each cradle type has its own default pairing method. When the Bluetooth connection beep sounds the scanner and cradle are connected.

- Presentation cradle default (pair on contacts): cradle and scanner are paired when the scanner is inserted into the cradle.
- Standard cradle default (scan pairing bar code): cradle and scanner are paired when the user scans the pairing bar code on the cradle.

**Note:** When pair on contacts is enabled you may still use the scan pairing bar code method. You can enable or disable the pair on contacts method for either cradle type by scanning the appropriate pairing method programming bar code from the LI4278 Product Reference Guide.

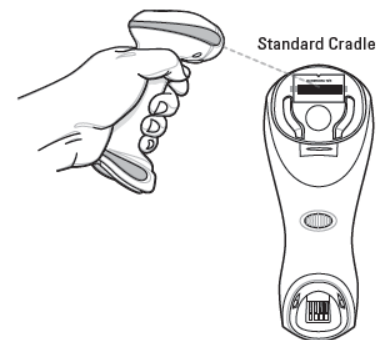

## STEP 4. ENABLE REQUIRED FEATURES

**To setup the scanner for operation with ChemAlert scan the following barcodes in order:**

- A. Erase any settings from the previous user, return the scanner to defaults by scanning the following barcode:

### SET DEFAULTS



RETURN TO FACTORY DEFAULTS

- B. Scan the following to have the scanner feed information to your PC.



HID KEYBOARD EMULATION

- C. Scan the following to have the scanner 'press enter' after scanning every barcode.

### ADD AN ENTER KEY (Carriage Return/Line Feed)

To add an Enter key after scanned data, scan all **THREE** bar codes in numerical order.

1



SCAN OPTIONS

2



<DATA><SUFFIX 1>

3



ENTER

- D. The scanner is now ready to be used, however you may like to enable some of the additional features on the next page.
- E. Before returning the scanner to H&S please turn it off and place in the box. You can turn off the scanner by scanning the following barcode.

### BATTERY OFF



BATTERY OFF FOR LONG TERM STORAGE/SHIPPING

## STEP 5. BATCH SCANNING (OPTIONAL)

## F. Batch Mode

- i. **Purpose.** Batch mode store barcodes in the scanner until instructed to transmit to your PC. It is especially useful if you PC is out of range of the scanner while you are scanning your chemical store. The scanners provided



**Standard Batch Mode  
(02h)**

## Modes of Operation

- **Normal (default)** - Do not batch data. The linear imager scanner attempts to transmit every scanned bar code.
- **Standard Batch Mode** - The linear imager scanner starts storing bar code data after **Enter Batch Mode** is scanned. Data transmission is triggered by scanning **Send Batch Data**.

✓ **NOTE** Transmission is halted if the connection to the remote device is lost.

In all modes, transmissions are halted if the linear imager scanner is moved out of range. The linear imager scanner resumes when it is back in range. If a bar code is scanned while batch data is transmitted it is appended to the end of the batched data; parameter bar codes are not stored.

- ii. **Enable.** Scan the code at the top of this page, then the code to the right.



**Enter Batch Mode**

- iii. **Transmit.** First ensure that the computer is ready. It would be prudent to use Word or Notepad to receive the barcodes rather than transmitting directly to ChemAlert, this will allow you to recover the barcodes if something goes wrong. On your PC position the text cursor where you want the barcodes to appear then scan the code to the right.



**Send Batch Data**




**\*Normal  
(00h)**


- iv. **Repeat.** Repeat steps ii – iii to re-enable batch scanning.
- v. **Disable / Cancel.** To turn off batch mode scan the code to the left.

## A. Volume

### Beeper Volume

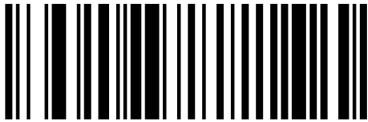

Low Volume  
(02h)

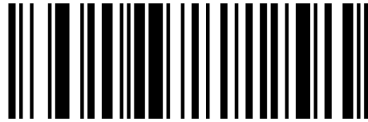

Medium Volume  
(01h)



\*High Volume  
(00h)

## B. To enable "Tab" after a barcode

- i. Other software programs may require the scanner to "press Tab" after scanning a code. To enable "Tab" scan the following **eight** barcodes.

### ADD AN ENTER KEY (Carriage Return/Line Feed)

To add an Enter key after scanned data, scan all **THREE** bar codes in numerical order.

1



SCAN OPTIONS

2



<DATA><SUFFIX 1>

3



ENTER

### ADD A TAB KEY

To add a **Tab** key after scanned data, scan all **THREE** Enter key bar codes (left) in numerical order then scan all **FIVE** bar codes below in numerical order.

1



SCAN SUFFIX

2



7

3



0

4



0

5



9

## To enable Continuous scanning

- iii. Be wary of double-scanning. Consider enabling the **unique barcodes** feature.
- iv. This mode can be used in combination with batch scanning if desired.

### Continuous Bar Code Read

Parameter # 649

Enable this to report every bar code while the trigger is pressed.



\*Disable Continuous Bar Code Read  
(0h)



Enable Continuous Bar Code Read  
(1h)

### Unique Bar Code Reporting

Parameter # 723

Enable this to report only unique bar codes while the trigger is pressed. This option only applies when **Continuous Bar Code Read** is enabled.



\*Disable Continuous Bar Code Uniqueness  
(00h)




Enable Continuous Bar Code Read Uniqueness  
(01h)

## SCANNER TROUBLESHOOTING AND ERGONOMICS

# LI4278 LINEAR IMAGER

## SCANNING

POST IN WORK AREA

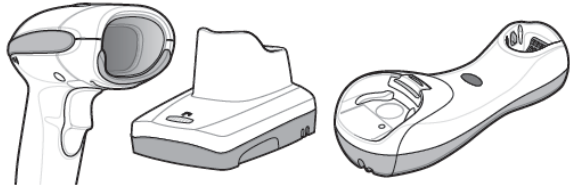


### Aiming



## RECOMMENDED USAGE GUIDE - OPTIMUM BODY POSTURE


### Avoid Extreme Wrist Angles

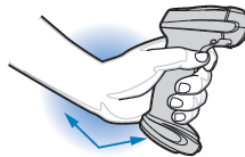

### Avoid Bending



### Avoid Reaching

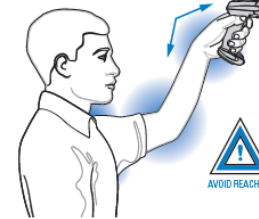

### Health and Safety Recommendations

#### ⚠ Ergonomic Recommendations

**Caution:** In order to avoid or minimize the potential risk of ergonomic injury follow the recommendations below. Consult with your local Health & Safety Manager to ensure that you are adhering to your company's safety programs to prevent employee injury.

- Reduce or eliminate repetitive motion.
- Maintain a natural position.
- Reduce or eliminate excessive force.
- Keep objects that are used frequently within easy reach.
- Perform tasks at correct heights.
- Reduce or eliminate vibration.
- Reduce or eliminate direct pressure.
- Provide adjustable workstations.
- Provide adequate clearance.
- Provide a suitable working environment.
- Improve work procedures.

## BEEPER INDICATIONS

### Standard Use

Low/medium/high beep	Short medium beep	4 long low beeps	4 short beeps
Power up	Bar code decoded	Transmission error detected; data is ignored	Low battery

### Parameter Menu Scanning

High/low/high/low beep	High/low beep	Low/high beep
Successful parameter setting	Correct programming sequence performed	Incorrect programming sequence or "Cancel" bar code scanned

### Wireless Operation

High/low/high/low beep	High/low beep	Low/high beep
Pairing bar code scanned	Bluetooth disconnection	Bluetooth connection established

## LED INDICATIONS

### Hand-Held Scanning

Off	Green	Red
Scanner is on and ready to scan, or no power to scanner	Bar code is successfully decoded	Transmission error

### Hands-Free (Presentation) Scanning

Off	Green	Off Momentarily	Red
No power to scanner	Scanner is ready to scan	Bar code is successfully decoded	Transmission error

### Charging

Off	Green - Slow Continuous	Green - Fast Continuous	Green - Solid
No power to scanner	Non-critical battery temperature fault	Scanner is charging	Scanner is fully charged

Local Contact: \_\_\_\_\_

## TROUBLESHOOTING

### Scanner not working

#### No power to scanner

Check system power; battery may be discharged; charge scanner in cradle; check battery door is closed; ensure battery end cap is secured

#### Scanner is disabled

Ensure that correct host interface cable is used

### Scanner not decoding bar code

#### Scanner not programmed for bar code type

Ensure scanner is programmed to read type of bar code being scanned

#### Bar code unreadable

Ensure bar code is not defaced; try scanning test bar code of same bar code type

#### Distance between scanner and bar code incorrect

Move scanner closer to or further from bar code

### Scanner decoding bar code, but data not transmitting to host

#### Scanner not programmed for correct host interface

Scan appropriate host parameter bar codes

#### Scanner not paired to host-connected interface

Pair the scanner to the cradle

#### Interface cable is loose

Ensure all cable connections are secure

#### Cradle lost connection to host

In this order: disconnect power supply; disconnect host cable; wait three seconds; reconnect host cable; reconnect power supply; reestablish pairing

### Scanned data incorrectly displayed on host

#### Scanner not programmed for correct host interface

Scan appropriate host parameter bar codes

### LED indicates low battery start-up

#### Low battery start-up

Wait for red LED to turn green indicating scanner is charging

#### Cradle communication error

Inspect contacts; remove and reinsert scanner in cradle

### LED indicates battery temperature

#### Battery is above or below normal operating temperature


Do not use scanner; move scanner to location with normal operating temperature; refer to the *Product Reference Guide* for more information



## ZD410 (203dpi) BARCODE PRINTER - QUICKSTART GUIDE

### STEP 1. INSTALLING THE PRINTER

1. First connect the ZD410 to the PC by USB, then plug in the power.
2. Press the Power button to turn on the printer, Windows 10 will notify you that it is installing the printer.
3. After a few minutes installation will be finished, proceed to configuration below.

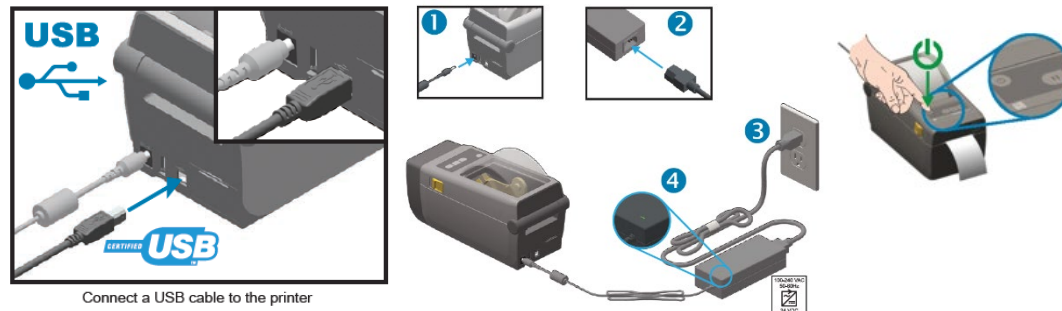

### STEP 2. CONFIGURING THE PRINTER

4. Download the setup files by following the instructions on the [H&S ChemAlert webpage](#), save these to your computer (e.g. the *Documents* folder).
5. In the windows search bar type in *printer*
6. Open the **Printers and Scanners** app
7. Click on **ZDesigner ZD410-203dpi ZPL** and click **Manage**
8. Select **Printer Properties** on the left
9. Select the **Driver Settings** tab
  - ! If the Driver tab isn't visible use the Alternative Configuration Instructions →
10. Go to *Import Driver Settings for all Users* and click **Import**
11. In the open file dialogue box change the option in the bottom-right corner, change the setting from *Driver export Files (\*.drx)* to **Legacy driver export Files (\*.drs)**
12. Select the driver settings file that you saved earlier: **ZD410\_Settings\_40x15mm\_DirectThermal\_20Dark.drs**, then click **Open**.
13. Click **Apply**, then **OK**.



#### ALTERNATIVE CONFIGURATION INSTRUCTIONS

If you couldn't see the tab *Driver Settings* you likely have an older version of Window 10. Try the below alternative:

- Click on **ZDesigner ZD410-203dpi ZPL** and click **Manage**
- Select **Printing Preferences** on the left
- Click the **Import/Export Settings** tab
- Click **Import**
- Select the driver settings file that you saved earlier: **ZD410\_Settings\_40x15mm\_DirectThermal\_20Dark.drs**, then click **Open**
- Click **Apply**, then **OK**.

### STEP 3. TESTING THE PRINTER


14. Finally, open the supplied example barcodes in **Adobe Acrobat**. Print these files using the *ZDesigner ZD410* printer, ensure the printed barcode is readable.
15. Open a text editor application, then scan your printed barcodes to ensure the scanner recognises the barcodes correctly.
  - ! If you experience any issues repeat the configuration steps again to ensure the driver settings are correctly applied, and see the Important Information to the right. →

#### IMPORTANT INFORMATION


- Always use a dedicated PDF reader such as **Adobe Acrobat** to open barcodes for printing.
- Barcodes opened from your internet browser will be compressed and made unreadable to scanners.

## TROUBLESHOOTING & LABEL REPLACEMENT

**GO**

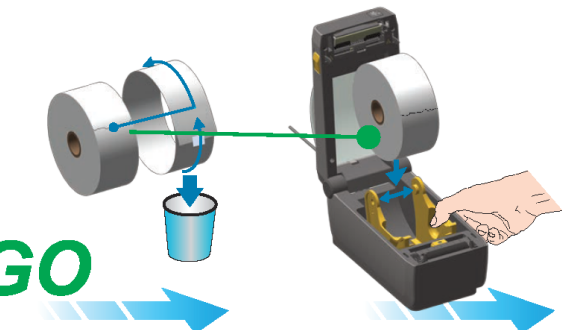

Remove and discard outer layer  
Extraiga y deseche la capa externa  
Retirez le pellicule de protection

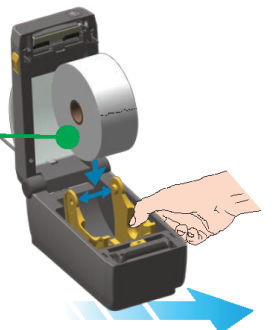

Open and place roll on holder  
Abra y coloque el rollo en el soporte  
Ouvrez le rouleau et positionnez-le sur le support




Verify easy spin on holder  
Verifique que gire fácilmente en el soporte  
Contrôlez la mise en place rapide




Pull paper past printer front  
Tire el papel hasta que salga más alla del frente de la impresora  
Tirez le papier à l'avant de l'imprimante



Push the paper under guides  
Empuje el papel debajo de las guías  
Passez-le sous les guides

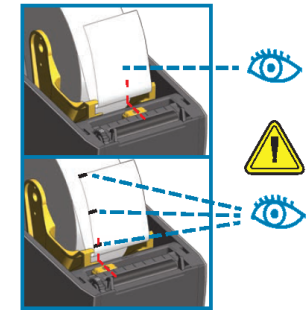

Align sensor near center (default)  
position or to middle of black marks.  
Alinee el sensor cerca de la posición central  
(predeterminada) o en el medio de las marcas negras  
Alignez la cellule sur la position centrale  
(valeur par défaut) ou sur le centre des marques noires

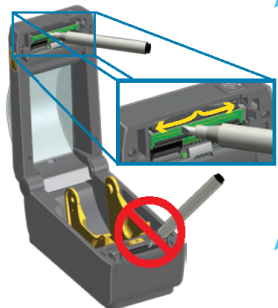

Clean printhead with cleaning pen  
Wipe from middle to the outside edge  
Limpie el cabezal de impresión con el lápiz de limpieza. Limpie desde el centro hacia el borde exterior.  
Nettoyez la tête d'impression à l'aide du stylet de nettoyage.  
Procédez en allant du centre vers le bord extérieur.

Indicators - Indicateurs - Indicadores					
STATUS	PAUSE	DATA	SUPPLIES	NETWORK	
					Ready Lista Prêt
					Paused En pausa En pause
					Cover Open Cubierta abierta Capot ouvert
					Media Out Sin papel Fin de papier
					Network Error Error de la red Erreur réseau
					Communication Error Error de comunicación Erreur de communication

Pause  
Pausa  
Pause

Feed  
Alimentación  
Avance

Cancel  
Cancelar  
Annuler

— <http://www.zebra.com/contact>


— <https://km.zebra.com>

— <https://www.zebra.com/supplies>

[www.zebra.com/zd410d-info](http://www.zebra.com/zd410d-info)




Close the printer  
Cierre la impresora  
Refermez l'imprimante

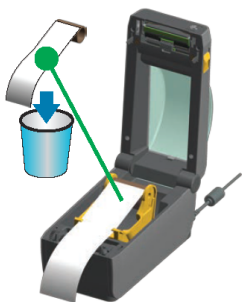


Open Printer  
Discard empty roll  
Abra la impresora  
Deseche el rollo vacío  
Ouvrez l'imprimante  
Retirez le rouleau usagé




Media Out  
Status + Media lights Red  
Sin papel  
Luces de estado + papel se encienden en color rojo  
Fin de papier  
Voyant rouge d'état et de support

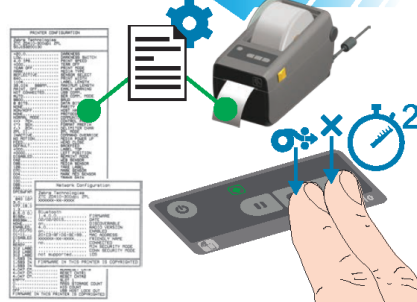


Press Feed + Cancel buttons for 2 seconds.  
Prints Configuration Report.  
Presione los botones Alimentación + Cancelar durante 2 segundos. Imprime el informe de configuración.  
Appuyez sur les boutons Avance et Annuler pendant 2 secondes. Impression d'un rapport de configuration.

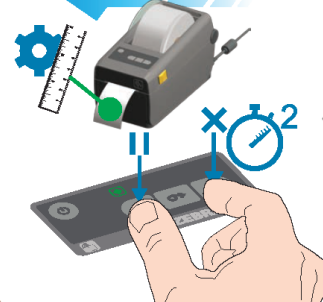

Press Pause + Cancel buttons for 2 seconds.  
Performs Smart Calibration.  
Presione los botones Pausa + Cancelar durante 2 segundos. Realiza la calibración inteligente.  
Appuyez sur les boutons Pausa et Annuler pendant 2 secondes. Exécution du calibrage intelligent.

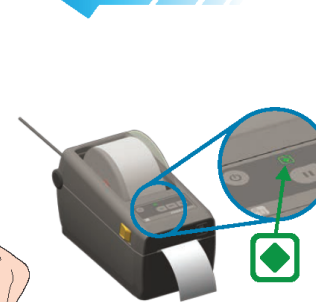

Green Status Light ON - Printer Ready  
Luz de estado de color verde encendida: impresora lista  
Voyant d'état vert allumé - Imprimante prête

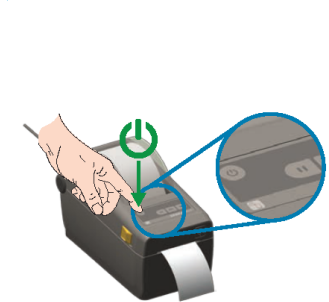

Press power and wait as lights cycle  
Presione el botón de encendido y espere que las luces completen el ciclo de encendido y apagado  
Appuyez sur le bouton Marche/Arrêt et attendez la fin du cycle d'initialisation

## PART 2: ACCESSING PRINTERS OVER THE NETWORK QUICK SETUP GUIDE

## SHARING A BARCODE PRINTER OVER THE NETWORK


The following steps will share a barcode printer over the Curtin Network from a Windows 10 computer.

(If your barcode printer is WiFi enabled these steps will not be necessary, instead follow the manufacturer's instructions.)

 
 
**Please note, for the printer to remain accessible on the network:**

- the printer must remain on;
- the computer hosting the printer must remain on, but does not need to be logged in;
- if connected via USB the printer must remain connected to the same port at all times.

To share the printer over the network complete the following steps from computer that the printer is physically connected to:

1. Go to the **Start** menu, and click **Settings** 
2. Click on **Devices**
3. Select **Printers & scanners** on the left
4. Click on the printer's name, e.g. *ZDesigner ZD410-203dpi ZPL*, and click **Manage**
5. Select **Printer properties** on the left
6. Select the **Sharing** tab at the top
7. Tick *Share this printer*
8. Change the name of the printer to indicate its location and/or ownership, e.g. *H&S 502B ZDesigner ZD410-203dpi ZPL*
9. Leave ticked *Render print jobs on client computers*
10. Tick *List in the directory*
11. Click **Apply**
12. Copy your new printer name
13. Select the **General** tab, and paste the new name for the printer in the top dialogue box, e.g. *H&S 502B ZDesigner ZD410-203dpi ZPL*
14. Click **OK**
15. If you get a message about renaming a shared printer, click **Yes**


*The printer will now be accessible over the network.*

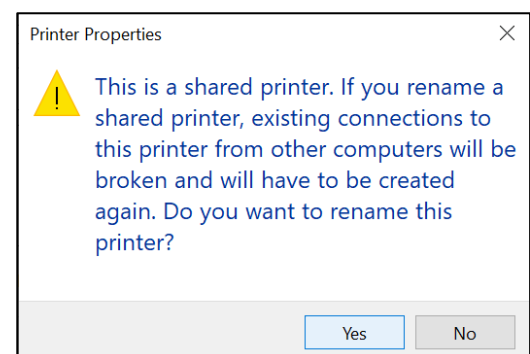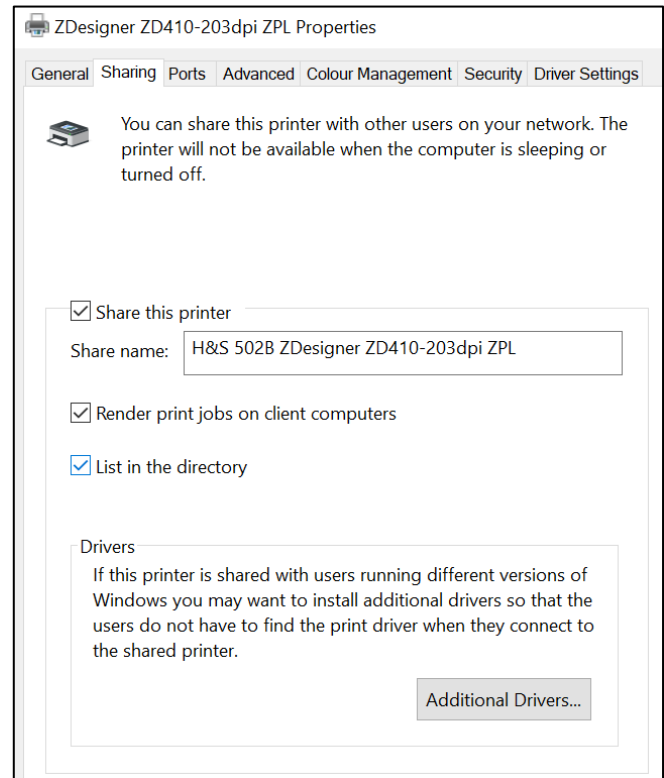


## ACCESSING A BARCODE PRINTER FROM THE NETWORK

The following steps will allow you to access a barcode printer over the Curtin network from a Windows 10 computer.

Complete the following steps on a computer that is not physically connected to the barcode printer, but is on the Curtin Network (this includes computers logged in through VPN):

 1. Go to the **Start** menu, and click **Settings** 
2. Click on **Devices**
3. Select **Printers & scanners** on the left
4. Click **Add a printer or scanner**
  - It may take a little while for the barcode printer to show in the list.
5. Select the correct barcode printer, then click **Add device**.  
e.g. *H&S 502B ZDesigner ZD410-203dpi ZPL on C-A0042262.staff.ad.curtin.edu.au*.
  - If the correct barcode printer is not on the list, follow the **Alternative Access Instructions** below:

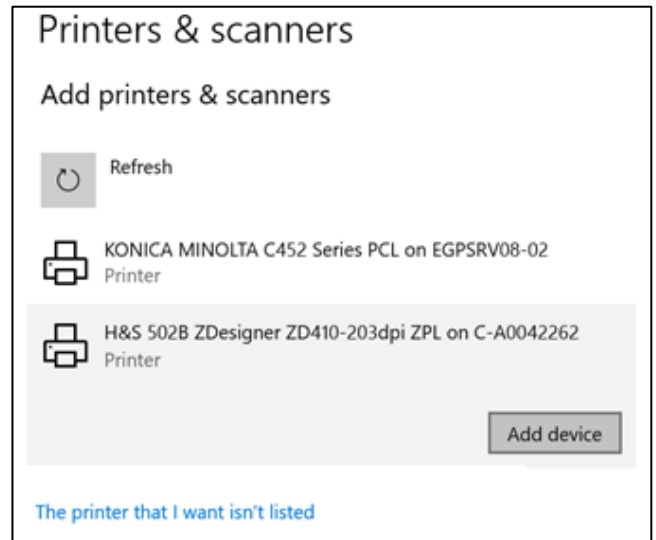

### ALTERNATIVE ACCESS INSTRUCTIONS


If you did not see your barcode printer in the printer list, follow the below steps:

1. Elevate the user profile to admin rights
2. Follow steps 1-4
3. Click **The printer that I want isn't listed**
4. Select *Find a printer in the directory, based on location or a feature*
5. Click **Next**
6. In the name field, type in the beginning of your printer's name, e.g. *H&S*
7. Click **Find Now**
8. Double click on the correct printer name to select it
9. An alert will appear, confirm that you want to install the driver from the computer hosting your printer
10. Once installation is complete, click **Next**
11. Choose whether you want this printer as your default or not, then click **Finish**

*The networked barcode printer will now be accessible to your applications on that networked computer.*

**OPTIONAL:** For computers that are used primarily to print barcode labels you may like to make this printer the default printer:

6. Return to **Printers & scanners**
7. Select your newly added barcode printer and click **Manage**
8. Click **Set as default**

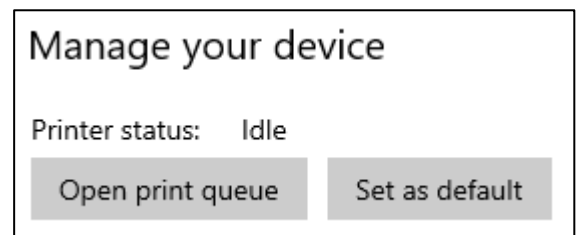


## PRINTING OVER THE NETWORK


### IMPORTANT INFORMATION

- Always use a dedicated PDF reader such as **Adobe Acrobat** to open barcodes for printing.
- Barcodes opened from your internet browser will be compressed and made unreadable to scanners.

1. Before printing over the network ensure that you can physically access the area where the barcodes will be printed out, and that you have permission to use that printer.
2. Open the PDF document containing your barcode/s in **Adobe Reader**
3. Click **Print**
4. From the printer drop-down menu, select your network barcode printer
  - The printer will be at the top of the list, and will begin with the laptop's name, e.g. \\C-A0042262.staff.ad.curtin.edu.au\H&S 502B ZDesigner ZD410-203dpi ZPL

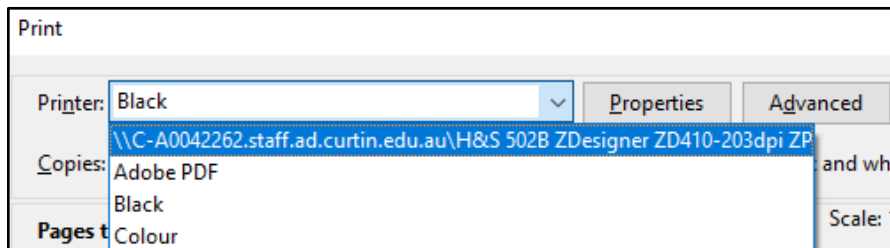

 5. Check that the *Page Sizing & Handling* settings are correct:
  - Select *Actual size*
  - Select *Orientation: Auto*

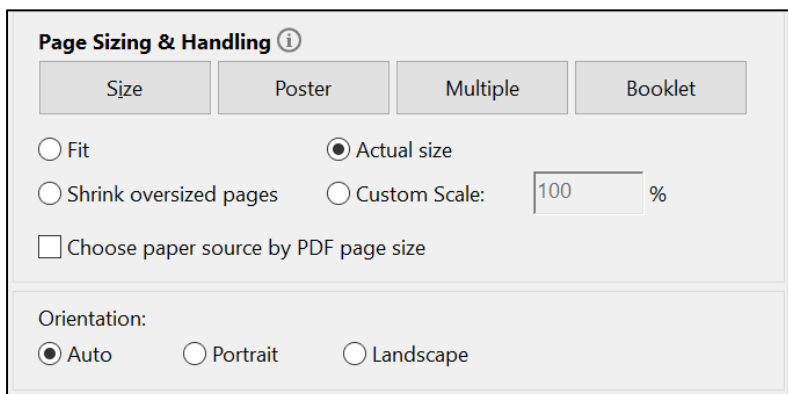

6. Click **Print**, and collect your labels.